

# DAVID CARR

---

# LOCKSMITHS & ALARMS

## **Aiphone Intercom Keypad**

To change master code or user codes please do the following:

### **Change master code**

Step 1: Enter programming mode: 1234 1234 (ie enter master code twice) – the green light will begin to flash

Step 2: press “A4” then enter new 4 digit code, then press “B” to save. Once this step is completed then this is your new master code. (Note: David Carr master code 2123)

### **Change entry code**

Step 1: Enter programming mode: 1234 1234 (ie enter default master code twice) – the green light will begin to flash

Step 2: press “01” then enter new 4 digit code, then press “B” to save. Once this step is completed then this is your new entry code.

### **Open Gate**


To open gate, enter your entry code and push open gate. The electric strike will open for 5 secs and then lock if gate not opened.

*Specialising in home security including a complete locksmith Service (including master & restricted key Systems), alarm systems, back to base monitoring, keyless access, CCTV systems, safes (standard and fire resistant).*

# DAVID CARR

## LOCKSMITHS & ALARMS

Detailed notes as follows:

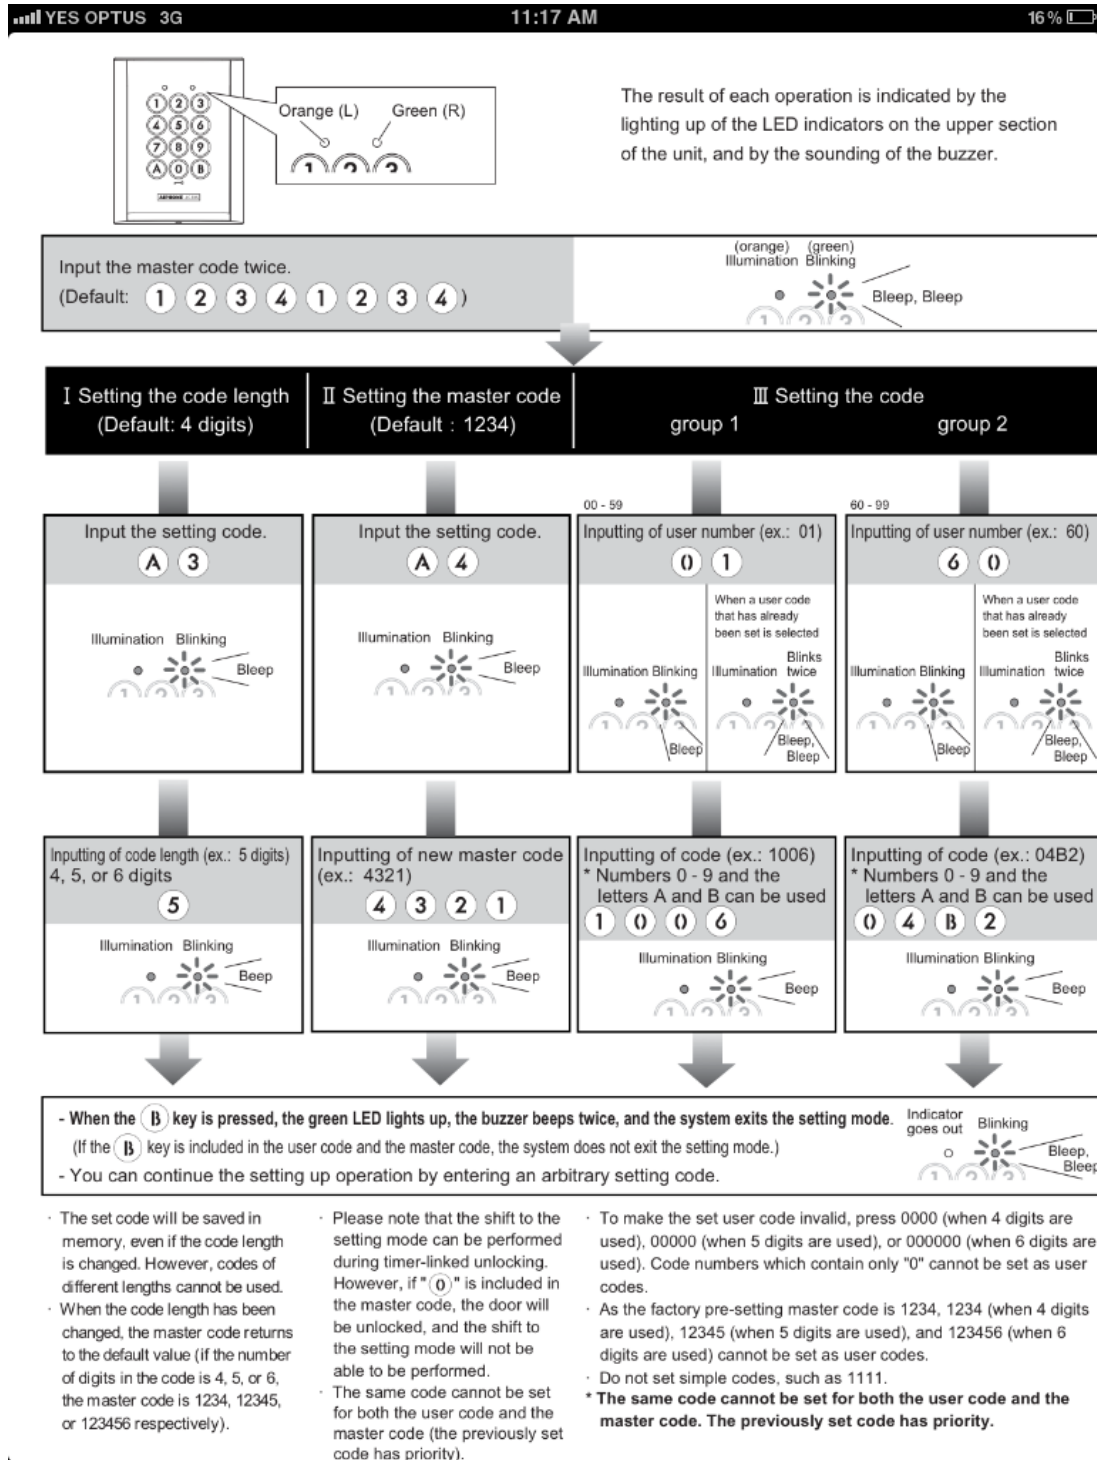

*Specialising in home security including a complete locksmith Service (including master & restricted key Systems), alarm systems, back to base monitoring, keyless access, CCTV systems, safes (standard and fire resistant).*